

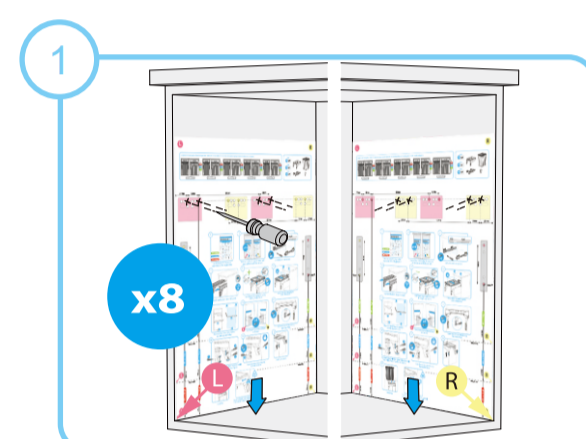


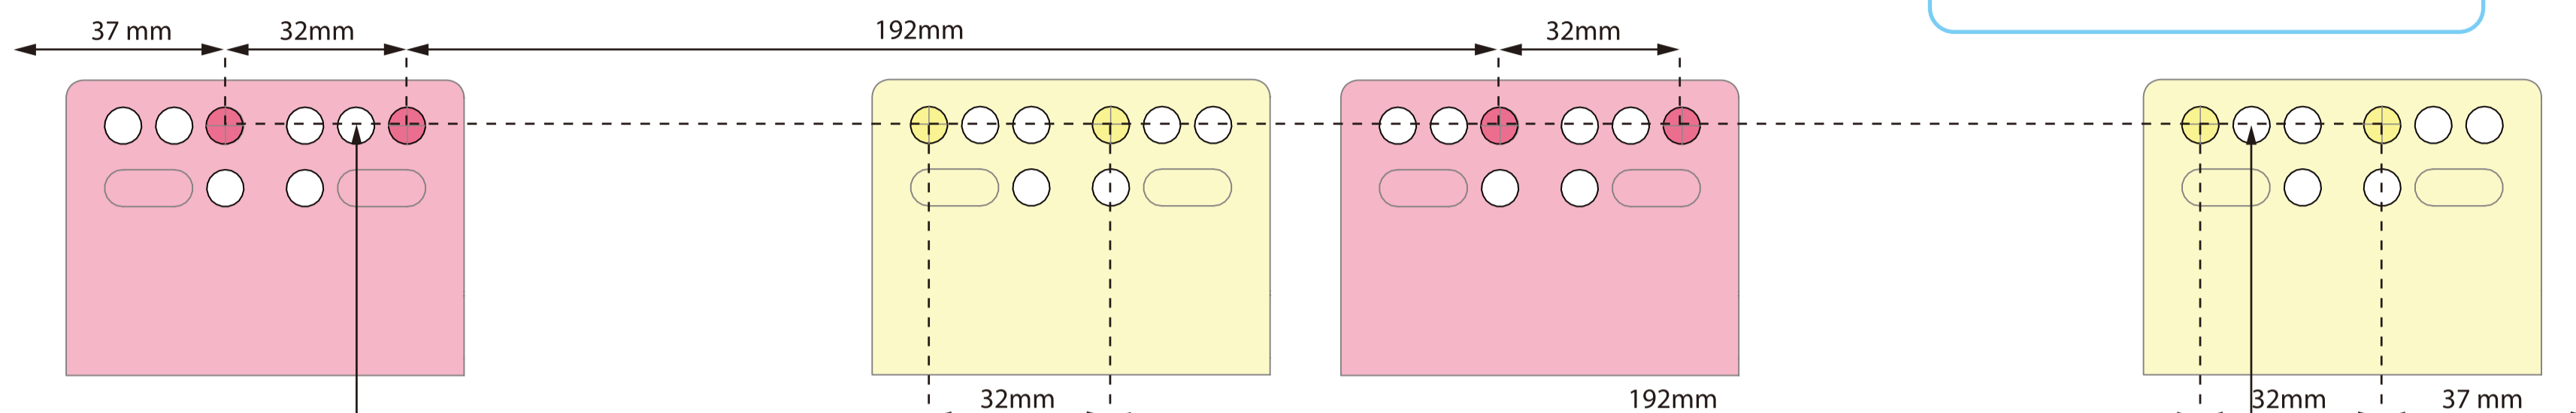


**הפרזול
החומרים
שעושים
את ההבדל**

סל כביסה KD555 - הוראות הרכבה


R

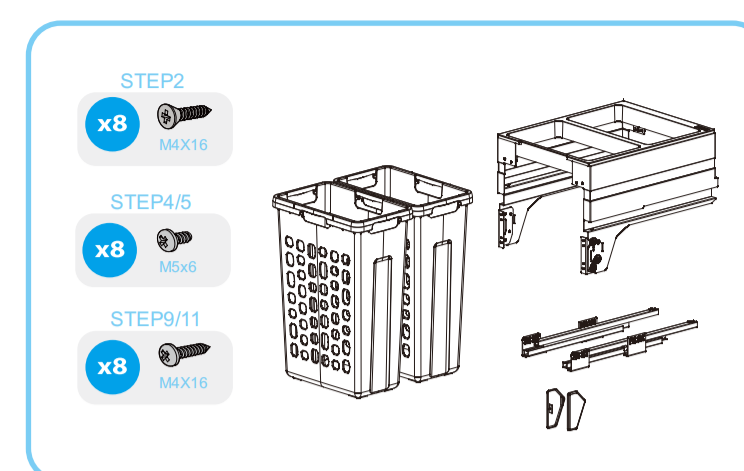


Measure from bottom edge of cabinet and use template to mark holes with awl.

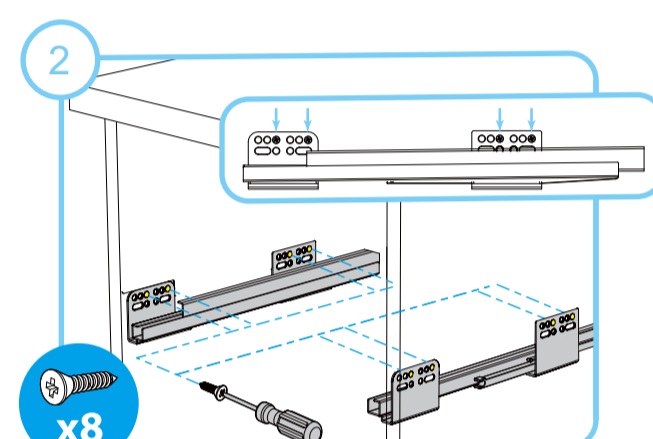


Drill and screw lower runners.

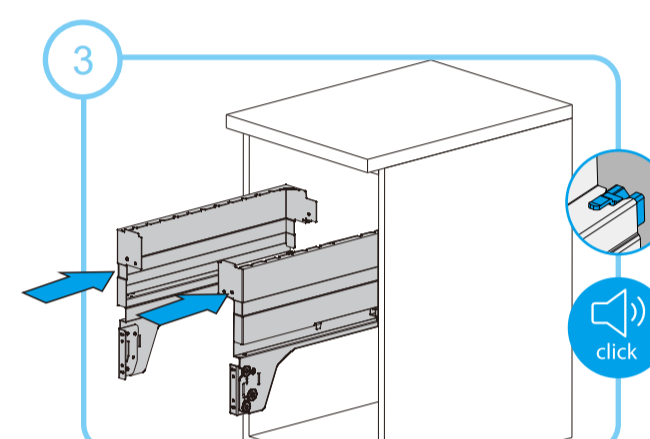


Install metal brackets. Makes click sound

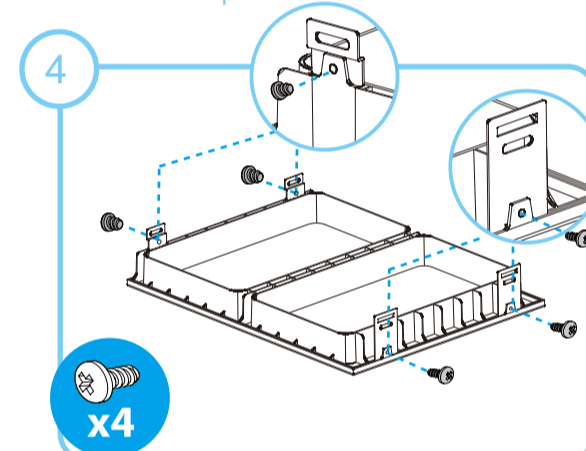


Screw metal brackets to the plastic tray

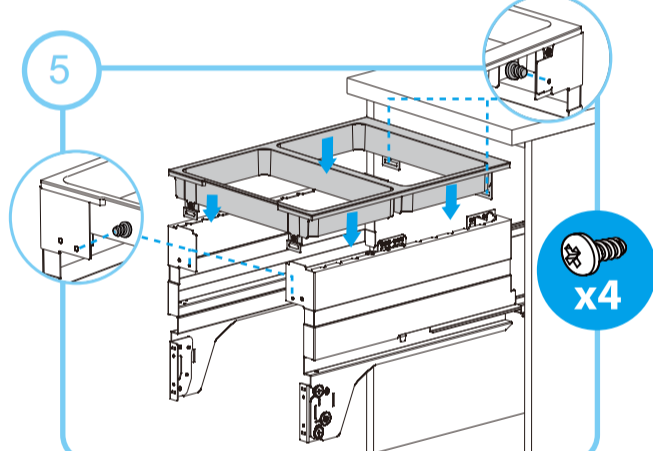


Install plastic tray loosely with screws, allowing for adjustment.

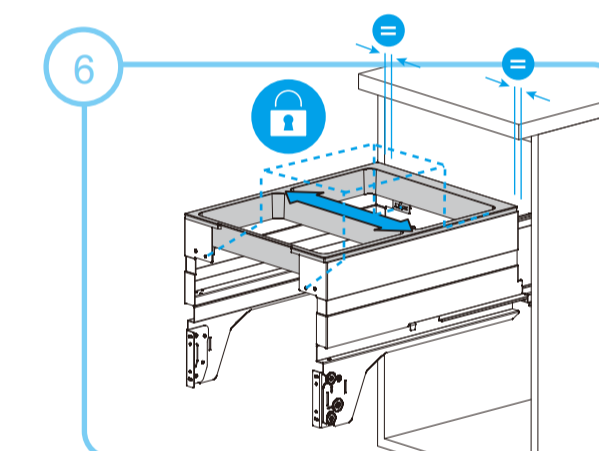


Adjust plastic tray position, tighten screws when parallel.

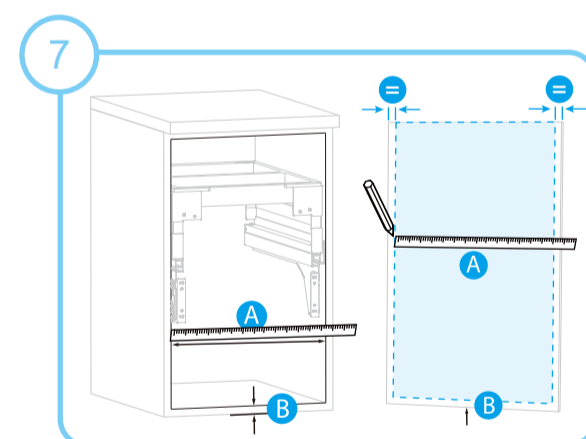


Measure and mark the cabinet bottom and side edge on the door.

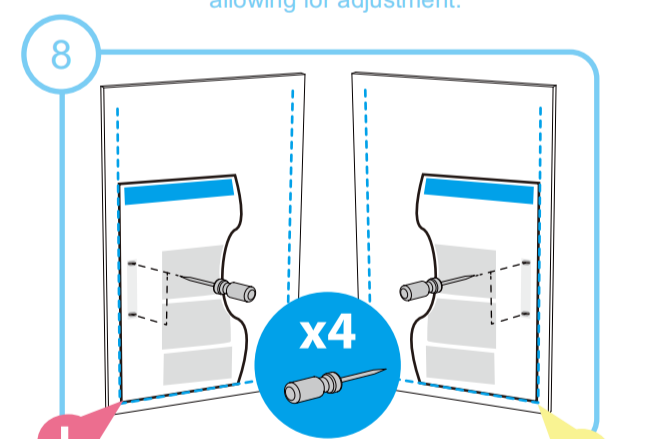


Use template to mark bracket holes on the door.

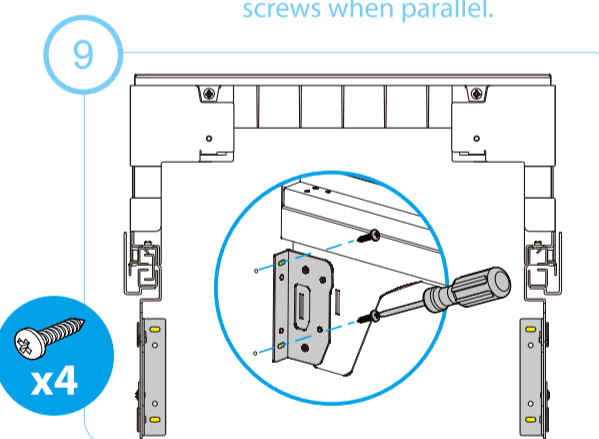


Screw door arms to cabinet using the slotted holes.

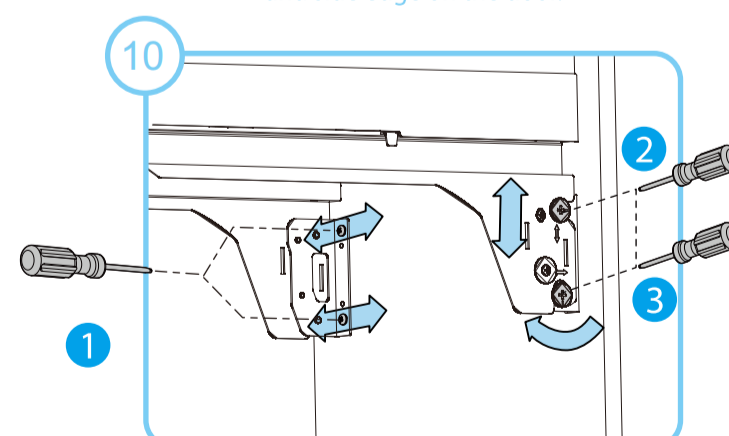


Adjust left and right ❶ then tighten.
Adjust vertical ❷ and tilt ❸

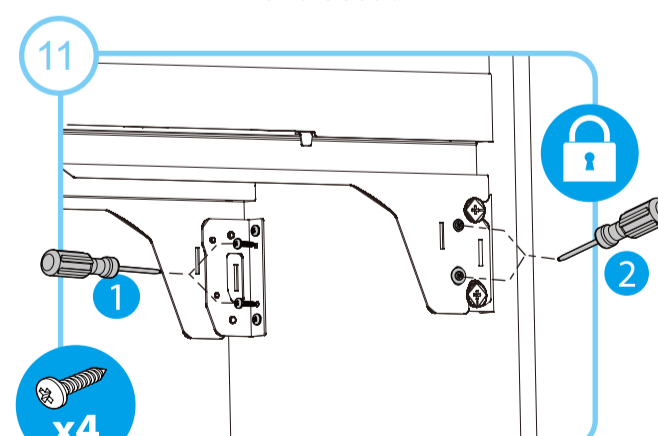


Screw the front bracket to the door 1
Lock vertical and tilt adjustment 2

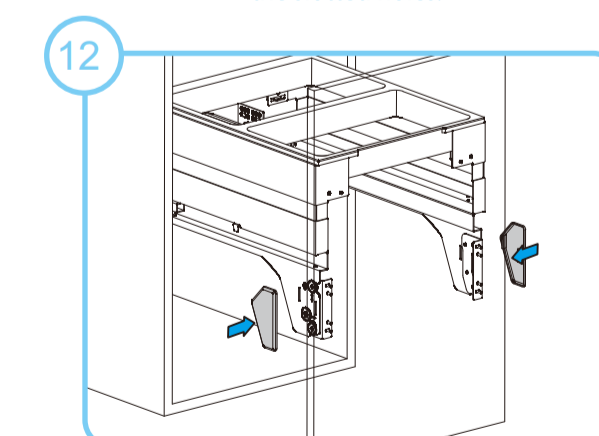

Install screw covers.

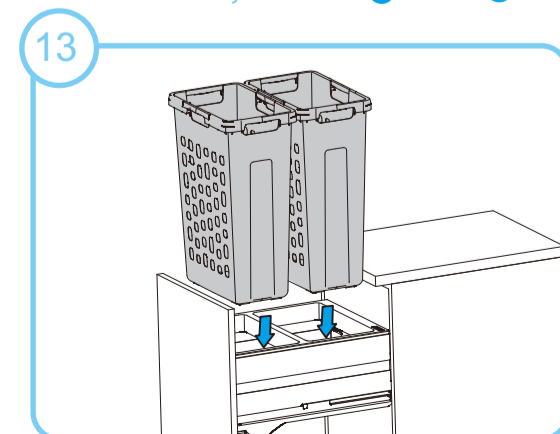

Insert laundry bin into travel

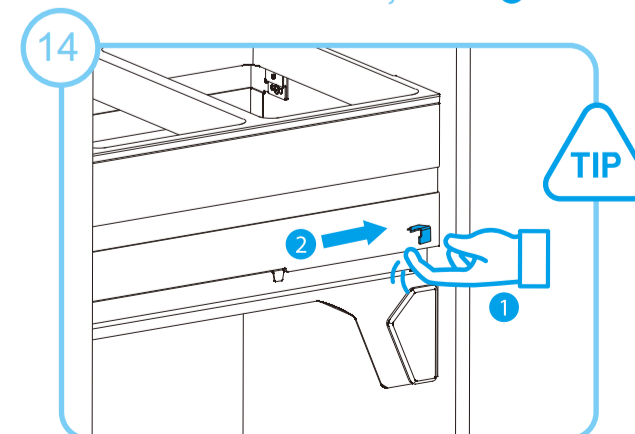

To release brackets from the runners, click switch 1 on the sides of the brackets and slide out 2

